

SHOWER NICHE INSTALLATION


INCLUDED:

- Shower Niche

YOU WILL NEED:

- Waterproofing membrane
- Thinset
- Grout **OR** Bathroom silicone*

*Silicone may be easier to work with but grout will result in a more durable and permanent bond.

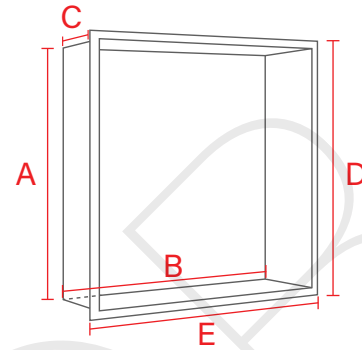

PREPARE OPENING

Prepare an opening between the vertical studs of your wall according to your shower niche's dimensions.

Note that the opening will need to be cut slightly larger than the niche to allow for the waterproofing membrane. Do not cut opening larger than the flange dimensions.

Install horizontal supports between the vertical studs.

Install waterproofing membrane in and around wall opening

Install tiles around wall opening.

IF USING SILICONE

After tiling is complete, apply thinset to the back of the opening.

Apply silicone around the back side of the niche flange.

Place shower niche into the prepared opening, pressing firmly. Wipe away excess silicone. Allow to dry for 24-48 hours.


IF USING GROUT

Before grouting tiles, apply thinset to the back of the opening.

Place shower niche into the prepared opening, leaving a small gap between the flange and the wall for grout.

While grouting tiles, grout around the edges of the niche. Allow to cure for 24-72 hours.

NICHE	OUTER BOX DIMENSIONS			OUTER FLANGE	
	HEIGHT (A)	WIDTH (B)	DEPTH (C)	HEIGHT (D)	WIDTH (E)
12"	11 ⁵ / ₁₆ "	11 ⁵ / ₁₆ "	3 ¹ / ₂ "	12"	12"
12" w/ shelf	23 ⁵ / ₁₆ "	11 ⁵ / ₁₆ "	3 ¹ / ₂ "	24"	12"
24"	11 ⁵ / ₁₆ "	23 ⁵ / ₁₆ "	3 ¹ / ₂ "	12"	24"
48"	10 ⁵ / ₁₆ "	47 ⁵ / ₁₆ "	3 ¹ / ₂ "	11"	48"

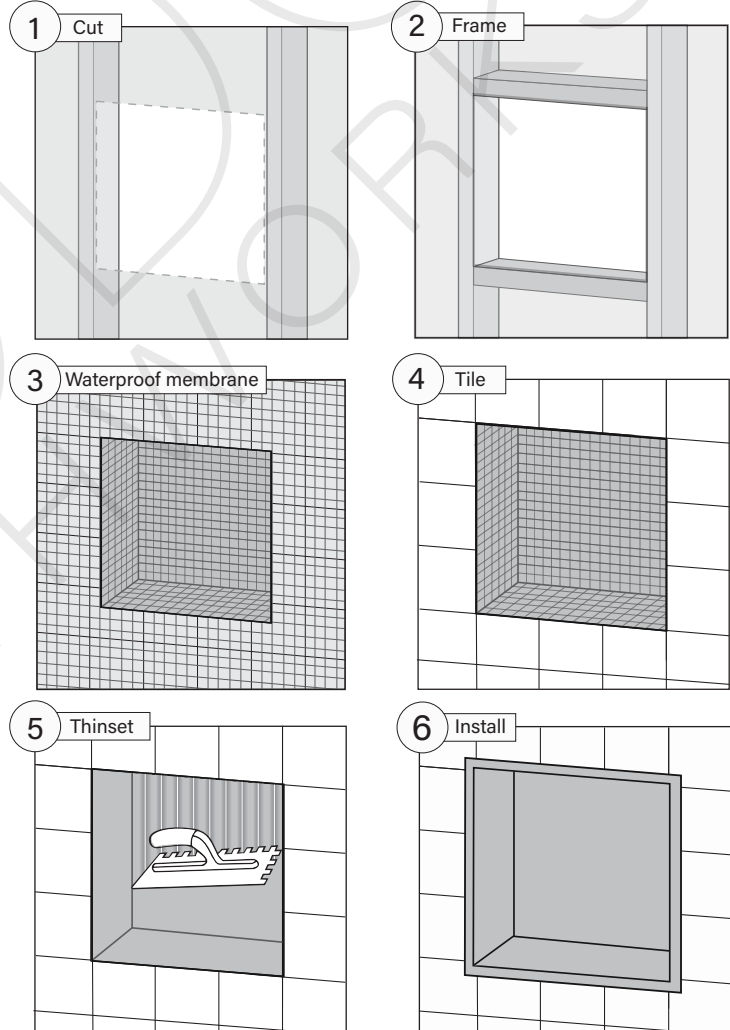

Scan the QR code or use the link below to view video instructions

<https://www.youtube.com/watch?v=NdeJ8V-xiD8>

NOTE: Images above are for instructional purposes only. Actual product may differ in size and style.

TEODOR

1-888-807-2323 | info@teodorvanities.com